

Processing notes PM Anti-Slip, PM Route and PM Stripe

Our safety strips are quick and easy to apply; kindly note the following instructions:

1. Storage of rolls, primer, edge-sealer at least at 18° C.
2. The surface on which you want to stick it, must have at least a temperate of 10° C.



3. Cleaning of the substrate with isopropanol – ventilating is necessary.



4. Brush blowy, sucking surface with Anti-Slip Primer (in any case when using it outdoor!).

Pretreat low energetic materials (PE, PP, powder-coated metals) with 3M Primer 94.


Let it dry well!

If the surface shows greater roughness, it is necessary to smooth it before priming to avoid penetration of humidity.



5. Cut tape to necessary length, remove liner partly, angle the tape (keep a distance of 15 mm from the leading edge of stairs to avoid damage of the tapes' edges), take-off the remaining liner and press on the tape.

Use our pressure roller!

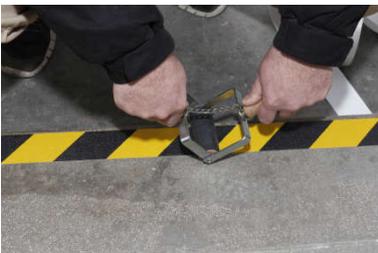

If you are laying PM Anti-Slip 3406 conformable, please use a rubber mallet to fit it to the structure of the surface.



6. Apply edge-sealer economically to increase the service life of the strips and to avoid penetration of humidity.

If there occurs a gap between the edges of the tapes and the substrate, use our product 310M Crystal instead of the edge-sealer.



Our safety strips can be used immediately after laying - maximum resilience occurs after 48 hours!

Information: These technical information are laboratory values respectively manufacturer's instructions. We cannot give any guarantee for the completeness and correctness. It is essential to check the ability of our products for the particular application. Questions about guarantee and liability are pointed out by our "General Terms and Conditions of Trade". *Status: January 2017*